

WARNING NAMEPLATE DETAIL

S-L CONTROLS, DWG D32384-30
VOLTAGE: 120VAC, 60HZ, SINGLE PHASE
AMPS: 28.75

SHORT CIRCUIT CURRENT: N/A

ENCLOSURE RATING: UL TYPE 4X

CAUTION: MULTIPLE POWER SOURCES ARE PROVIDED FROM FIELD
TERMINALS. EACH SOURCE SHOULD BE DISCONNECTED FOR
SERVICING.

WARNING: TO MAINTAIN OVERCURRENT, SHORT CIRCUIT, AND
GROUND FAULT PROTECTION, THE MANUFACTURER'S INSTRUCTIONS
FOR SELECTING CURRENT ELEMENTS MUST BE FOLLOWED

NAMEPLATES SIZED AS REQUIRED



NAME PLATE LEGEND TABLE

ITEM	QTY	DESCRIPTION
1	1	UPS CONTROL PANEL

NOTES:
ALL PLATES SHALL BE ENGRAVED ON WHITE BACKGROUND WITH
BLACK CHARACTERS. LETTER HEIGHT SHOULD BE MINIMUM 1/4"

WIRING:


- 1) □ - INDICATES CABINET TERMINAL BLOCK
- 2) DASHED LINES INDICATE WIRING REMOTE TO CONTROL PANEL.
- 3) PROVIDE 20% SPARE TERMINALS
- 4) UL APPROVED NO. TO BE PROVIDED AT TIME OF MANUFACTURING
- 5) ELECTRICAL CONNECTION TORQUES:
TERMINAL: 12 INCH POUNDS
CIRCUIT BREAKER: 20 INCH POUNDS

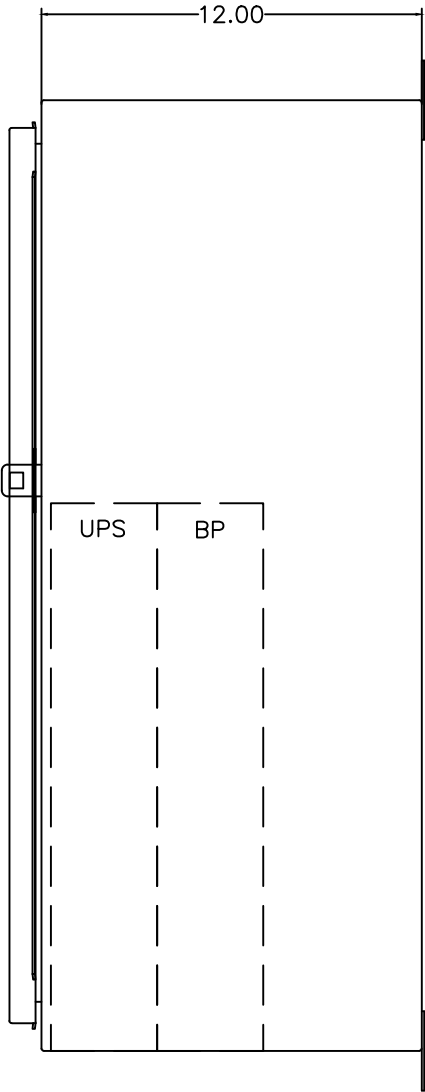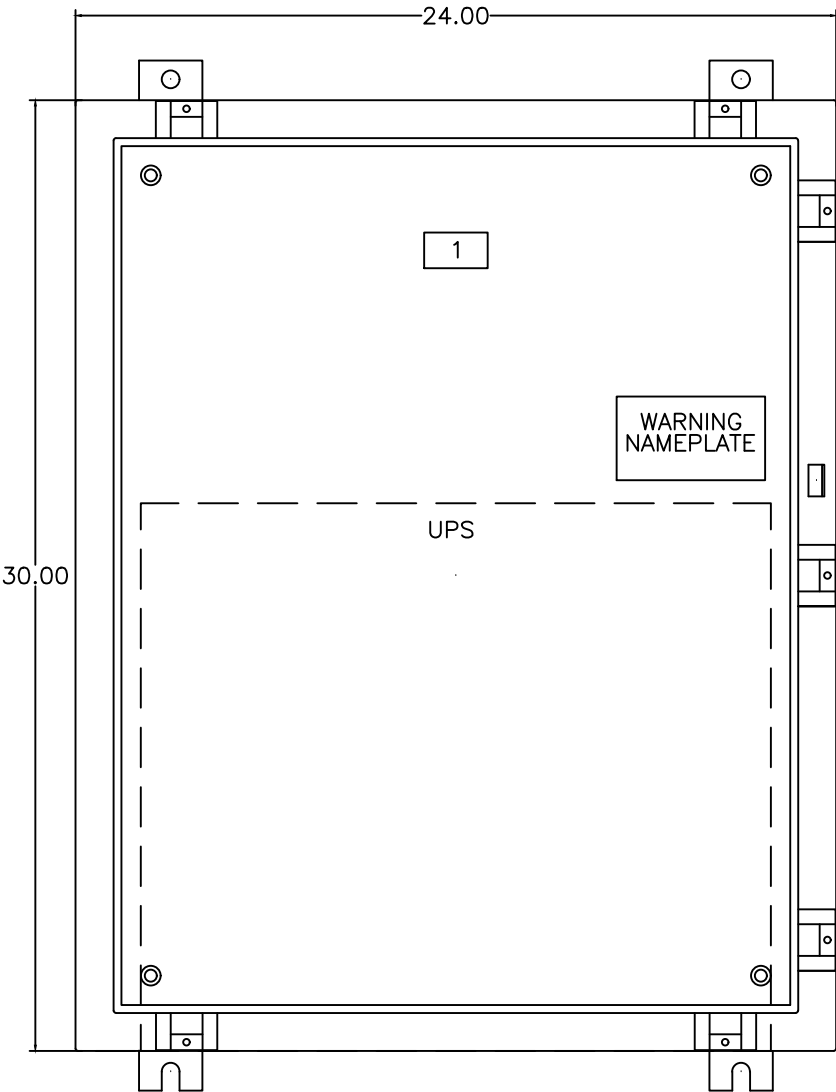

PANEL WIRING


AREA	VOLTAGE	NOUN NAME	ID	GAGE	COLOR	TYPE
INTERNAL	120VAC	HOT	(1), (1A), (X1)	14	BLACK	MTW
INTERNAL	120VAC	NEUTRAL	(N)	14	WHITE	MTW
CONTROL	120VAC	HOT	VARIOUS	16	RED	MTW
CONTROL	120VAC	NEUTRAL	N	16	WHITE	MTW
CONTROL	24VDC	DC+	VARIOUS	16	BLUE	MTW
CONTROL	24VDC	DC-	VARIOUS	16	WHT/BLU	MTW

TOLERANCES	REVISIONS			POMONKEY PUMP STATION UPS PANEL EXT. ENCLOSURE LAYOUT		
	NO.	DATE	BY			
DECIMAL	1					
	2					
FRACTIONAL	3			DRAWN BY ZBB	SCALE NONE	MATERIAL
	4			CHK'D MN	DATE 12-31-2025	DRAWING NUMBER
ANGULAR	5			TRACED	APP'D	D32384-30
	6					

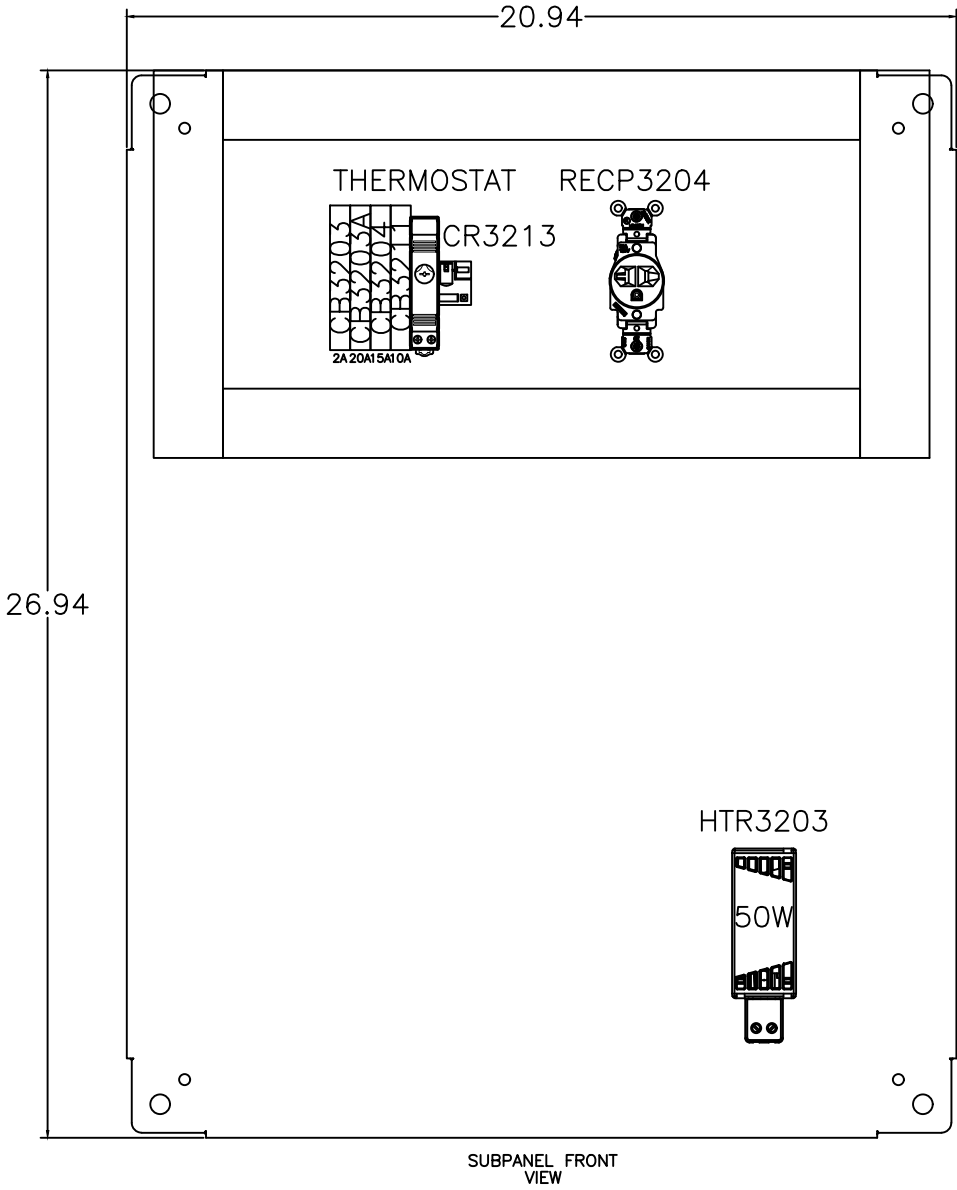

TAGS	QTY	CATALOG	DESCRIPTION	MANUFACTURER
ENC	1	SCE-30H2412SSLP	WALL MOUNT ENCLOSURE – NEMA 4X	SCE
ENC	1	SCE-30P24	ENCLOSURE BACKPANEL	SCE
CB3203	1	7940102572	CIRCUIT BREAKER, 120VAC, 2A	WEIDMULLER
CB3203A	1	7940102584	CIRCUIT BREAKER, 120VAC, 20A	WEIDMULLER
CB3204	1	7940102582	CIRCUIT BREAKER, 120VAC, 15A	WEIDMULLER
CB3211	1	7940102580	CIRCUIT BREAKER, 120VAC, 10A	WEIDMULLER
RECP3204	1	5801-W	SINGLE RECEPTACLE, 20A	LEVITON
CR3213	1	RXM3AB2F7	MINIATURE RELAY, 120VAC, 11 BLADE	SCHNEIDER ELECTRIC
CR3213	1	RXZE2S111M	MINIATURE RELAY SOCKET, 120VAC, DIN	SCHNEIDER ELECTRIC
UPS	1	SRT1000XLA	UNINTERRUPTIBLE POWER SUPPLY	APC
UPS	1	AP9614	DRY CONTACT I/O CARD	APC
BP	1	SRT48BP	UPS EXTERNAL BATTERY PACK	APC
HTR3203	1	SCE-TSH50	ENCLOSURE HEATER	SCE
THERMOSTAT	1	7T.81.0.000.2403	ENCLOSURE HEATER THERMOSTAT, NC	FINDER
TB-AC, TB-UPS	10	3044076	UNIVERSAL TERMINAL BLOCK – UT 2,5	PHOENIX CONTACT
TB-AC, TB-UPS	A/R	3047028	TERMINAL END BARRIER	PHOENIX CONTACT
TB-AC, TB-UPS	A/R	3044092	GROUNDING TERMINAL BLOCK	PHOENIX CONTACT
TB-AC, TB-UPS	A/R	0800886	TERMINAL ANCHOR	PHOENIX CONTACT

TOLERANCES	REVISIONS			POMONKEY PUMP STATION UPS PANEL INT. PANEL LAYOUT		
	NO.	DATE	BY			
DECIMAL	1					
	2					
FRACTIONAL	3			DRAWN BY ZBB	SCALE NONE	MATERIAL
	4			CHK'D MN	DATE 12-31-2025	DRAWING NUMBER
ANGULAR	5			TRACED	APP'D	D32384-31
	6					

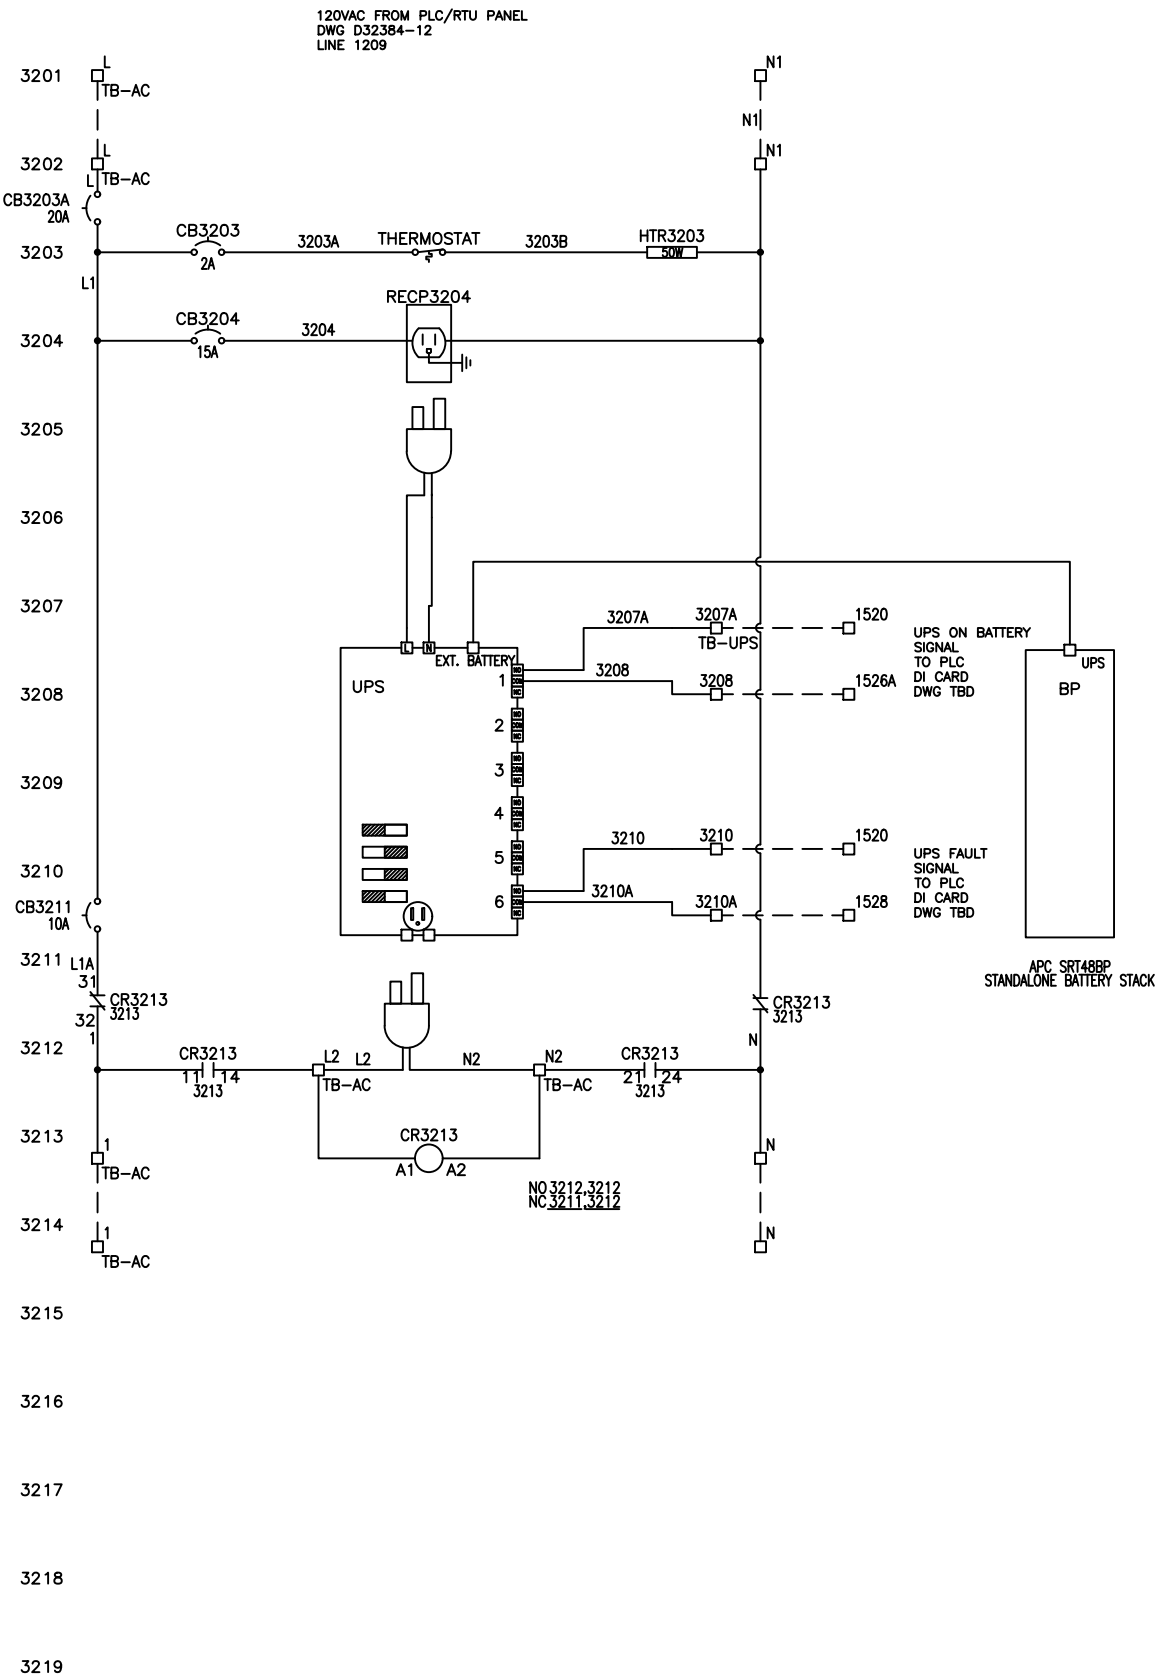

TOLERANCES		REVISIONS			POMONKEY PUMP STATION UPS PANEL UPS WIRING DIAGRAM		
		NO.	DATE	BY			
DECIMAL	1						
	2						
FRACTIONAL	3				DRAWN BY ZBB	SCALE NONE	MATERIAL
	4				CHK'D MN	DATE 12-31-2025	DRAWING NUMBER
ANGULAR	5				TRACED	APP'D	D32384-32
	6						