

WARNING NAMEPLATE DETAIL

S-L CONTROLS, DWG D32384-10  
VOLTAGE: 120VAC, 60HZ, SINGLE PHASE  
AMPS: 0.93A

SHORT CIRCUIT CURRENT: N/A

ENCLOSURE RATING: UL TYPE 4X

CAUTION: MULTIPLE POWER SOURCES ARE PROVIDED FROM FIELD  
TERMINALS. EACH SOURCE SHOULD BE DISCONNECTED FOR  
SERVICING.

WARNING: TO MAINTAIN OVERCURRENT, SHORT CIRCUIT, AND  
GROUND FAULT PROTECTION, THE MANUFACTURER'S INSTRUCTIONS  
FOR SELECTING CURRENT ELEMENTS MUST BE FOLLOWED

NAMEPLATES SIZED AS REQUIRED

NAME PLATE LEGEND TABLE

| ITEM | QTY | DESCRIPTION                                                                                                                                 |
|------|-----|---------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | 2   | PLC/RTU / CONTROL PANEL                                                                                                                     |
| 2    | 2   | CONTROL POWER                                                                                                                               |
| 3    | 2   | ALARM TEST                                                                                                                                  |
| 4    | 1   | FU1501, FU1520, FU1601: MERSEN<br>MI5HF25V0.5/100 0.5A FU1758, FU1759,<br>FU1760, FU1761, FU1762, FU1763, FU1764,<br>FU1765: MERSEN GGM3 3A |
| 5    | 1   | FU1405, FU1407: MERSEN MI5HF25V2/100 2A                                                                                                     |

NOTES:

ALL PLATES SHALL BE ENGRAVED ON WHITE BACKGROUND WITH  
BLACK CHARACTERS. LETTER HEIGHT SHOULD BE MINIMUM 1/4"

WIRING:

- 1) □ - INDICATES CABINET TERMINAL BLOCK
- 2) DASHED LINES INDICATE WIRING REMOTE TO CONTROL PANEL.
- 3) PROVIDE 20% SPARE TERMINALS
- 4) UL APPROVED NO. TO BE PROVIDED AT TIME OF MANUFACTURING
- 5) ELECTRICAL CONNECTION TORQUES:  
TERMINAL: 12 INCH POUNDS  
CIRCUIT BREAKER: 45 INCH POUNDS


ADDITIONAL PANEL LABELS:

A\* = "INTRINSICALLY SAFE FIELD WIRING TERMIANLS"



B\* = "WARNING - EXPLOSION HAZARD - SUBSTITUTION OF  
COMPONENTS MAY IMPAIR INTRINSIC SAFETY"

C\* = "INTRINSICALLY SAFE CIRCUITS" (TO BE PLACED BY  
CONTRACTOR AT CONDUIT OPENING)

D\* = "WARNING - EXPLOSION HAZARD, TO PREVENT IGNITION  
OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT  
POWER BEFORE SERVICING.

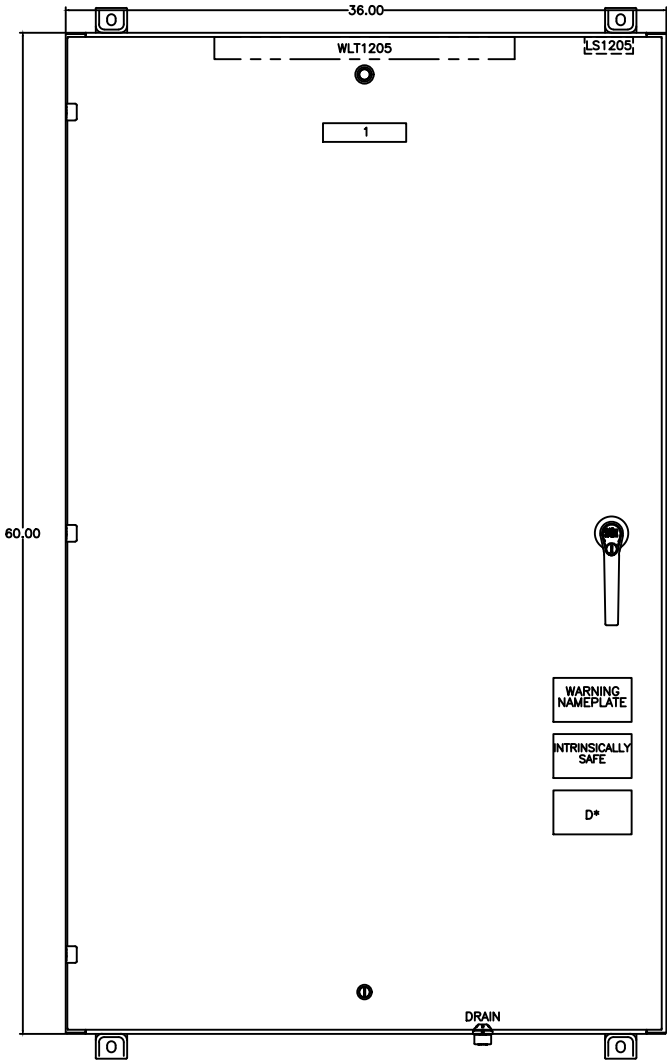

FRONT  
VIEW

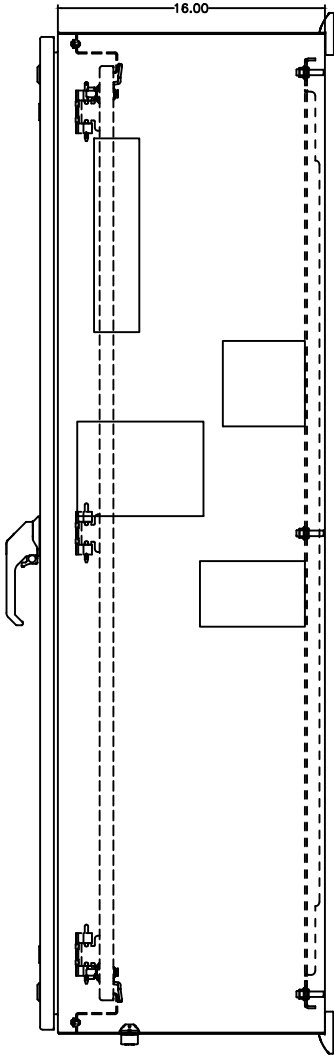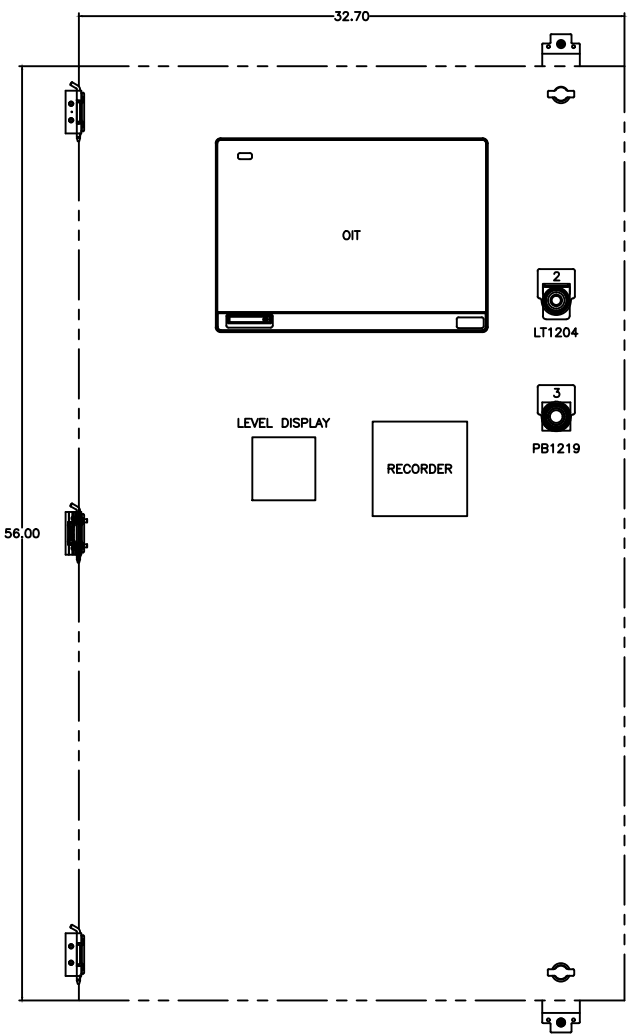


RIGHT SIDE  
VIEW

PANEL WIRING



| AREA                    | VOLTAGE | NOUN NAME | ID                 | GAGE | COLOR                   | TYPE |
|-------------------------|---------|-----------|--------------------|------|-------------------------|------|
| INTERNAL                | 120VAC  | HOT       | (1), (1A),<br>(X1) | 14   | BLACK                   | MTW  |
| INTERNAL                | 120VAC  | NEUTRAL   | (N)                | 14   | WHITE                   | MTW  |
| CONTROL                 | 120VAC  | HOT       | VARIOUS            | 16   | RED                     | MTW  |
| CONTROL                 | 120VAC  | NEUTRAL   | N                  | 16   | WHITE                   | MTW  |
| CONTROL                 | DC      | DC+       | VARIOUS            | 16   | BLUE                    | MTW  |
| CONTROL                 | DC      | DC-       | VARIOUS            | 16   | BLUE W/<br>WHITE STRIPE | MTW  |
| EXTERNALLY<br>ENERGIZED |         | HOT       | VARIOUS            | 16   | YELLOW                  | MTW  |
| ANALOG                  | 24VDC   | 4-20MA    | VARIOUS            | 18   | BLACK/RED               | TSP  |

| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS<br>PLC/RTU CONTROL PANEL EXT. LAYOUT |                 |                |
|------------|-----------|------|----|-------------------------------------------------------------------------|-----------------|----------------|
|            | NO.       | DATE | BY |                                                                         |                 |                |
| DECIMAL    | 1         |      |    |                                                                         |                 |                |
|            | 2         |      |    |                                                                         |                 |                |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                                                            | SCALE NONE      | MATERIAL       |
|            | 4         |      |    | CHK'D MN                                                                | DATE 03-12-2026 | DRAWING NUMBER |
| ANGULAR    | 5         |      |    | TRACED                                                                  | APP'D           | 32384-10       |
|            | 6         |      |    |                                                                         |                 |                |

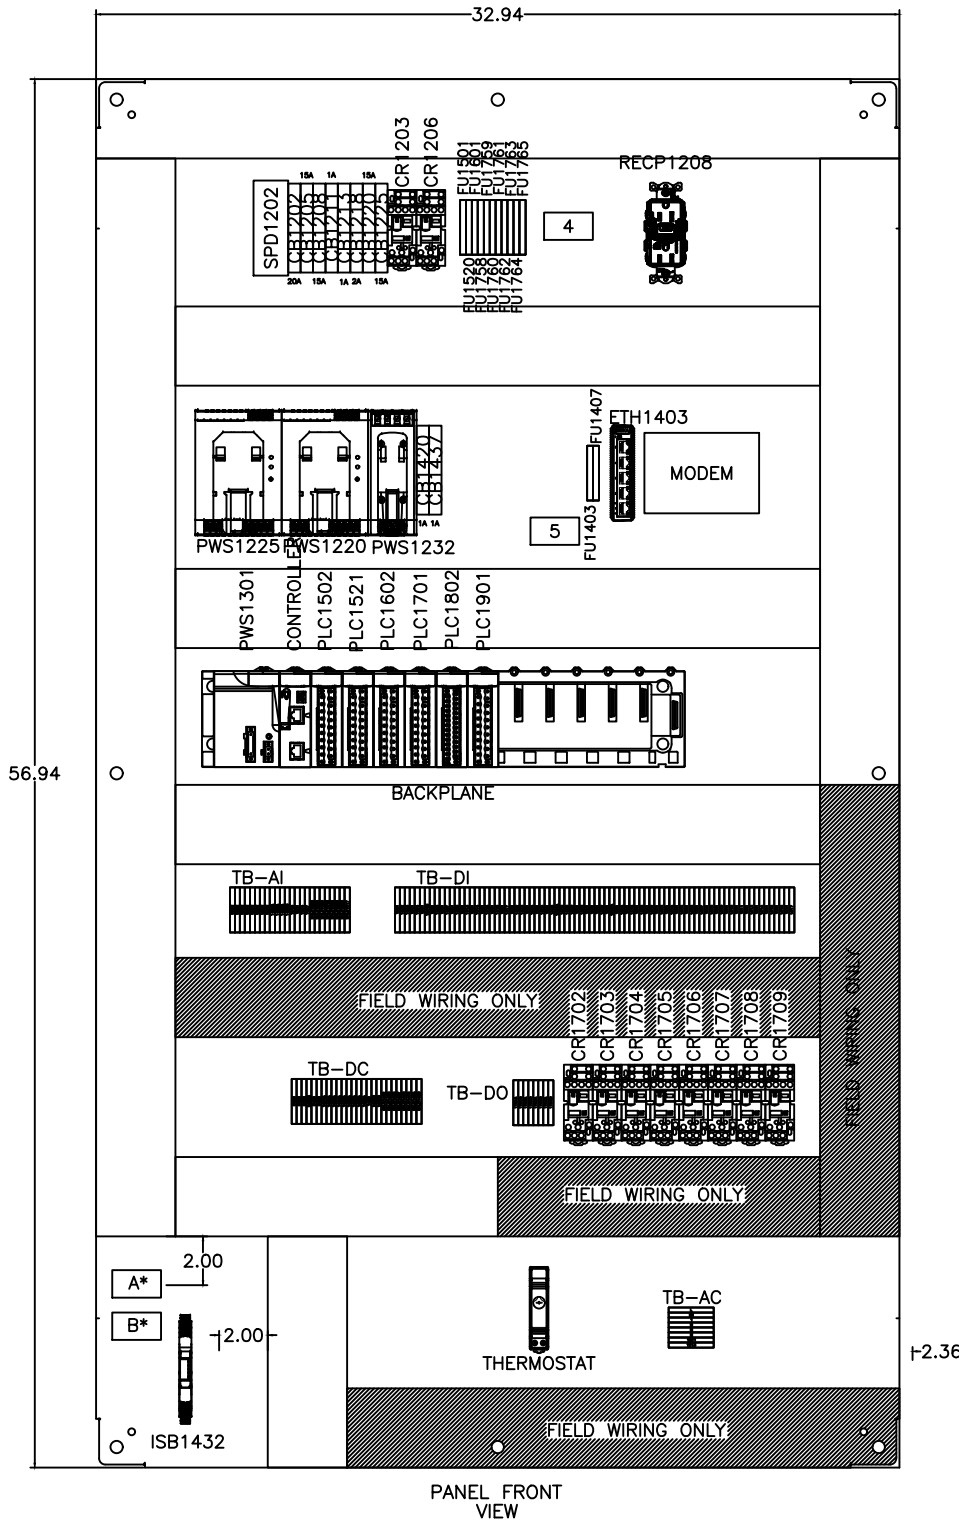




| TAGS                                                                                                   | QTY | CATALOG             | DESCRIPTION                          | MANUFACTURER       |
|--------------------------------------------------------------------------------------------------------|-----|---------------------|--------------------------------------|--------------------|
| ENC                                                                                                    | 1   | SCE-60EL3616SS6LPPL | NEMA 4X WALL MOUNT ENCLOSURE         | SCE                |
| ENC                                                                                                    | 1   | SCE-DF60EL36LP      | DEAD FRONT PANEL                     | SCE                |
| ENC                                                                                                    | 1   | SCE-60P36           | ENCLOSURE BACK PANEL                 | SCE                |
| ENC                                                                                                    | 1   | SCE-ELMFK4          | WALL MOUNT FOOT KIT                  | SCE                |
| DRAIN                                                                                                  | 1   | SCE-BVKD            | NEMA 4X VENT/DRAIN                   | SCE                |
| WLT1205                                                                                                | 1   | 26741               | LED LIGHT FIXTURE                    | JASCO              |
| LT1204                                                                                                 | 1   | 9001SKT38LWW31      | PTT LIGHT, 120VAC LED, WHITE         | SCHNEIDER ELECTRIC |
| PB1219                                                                                                 | 1   | 9001SKR1B           | PUSHBUTTON, BLACK                    | SCHNEIDER ELECTRIC |
| PB1219                                                                                                 | 1   | 9001KA2             | 1 NO CONTACT                         | SCHNEIDER ELECTRIC |
| SPD1202                                                                                                | 1   | DS42S-120/G         | TRANS. VOLTAGE SURGE SUPPRESSOR      | CITEL              |
| PWS1220, PWS1225                                                                                       | 2   | 2866776             | 24VDC POWER SUPPLY                   | PHOENIX CONTACT    |
| PWS1232                                                                                                | 1   | 2320157             | 24VDC POWER SUPPLY REDUNDANCY MODULE | PHOENIX CONTACT    |
| CB1202                                                                                                 | 1   | 7940102584          | CIRCUIT BREAKER, 120VAC, 20A         | WEIDMULLER         |
| CB1211, CB1213                                                                                         | 2   | 7940125379          | CIRCUIT BREAKER, 120VAC, 1A          | WEIDMULLER         |
| CB1205, CB1208, CB1220, CB1225                                                                         | 4   | 7940102582          | CIRCUIT BREAKER, 120VAC, 15A         | WEIDMULLER         |
| CB1218                                                                                                 | 1   | 7940102572          | CIRCUIT BREAKER, 120VAC, 2A          | WEIDMULLER         |
| CB1420, CB1437                                                                                         | 2   | 7940102624          | CIRCUIT BREAKER, 24VDC, 1A           | WEIDMULLER         |
| RECP1208                                                                                               | 1   | GFRST15W            | DUPLEX GFCI RECEPTACLE, 15A          | HUBBEL             |
| CR1203, CR1206, CR1702, CR1703, CR1704, CR1705, CR1706, CR1707, CR1708, CR1709                         | 10  | RXM2AB2F7           | MINIATURE RELAY, 120VAC, 8 BLADE     | SCHNEIDER ELECTRIC |
| CR1203, CR1206, CR1702, CR1703, CR1704, CR1705, CR1706, CR1707, CR1708, CR1709                         | 10  | RXZE2M114           | MINIATURE RELAY SOCKET, 120VAC, DIN  | SCHNEIDER ELECTRIC |
| LEVEL DISPLAY                                                                                          | 1   | RIA452-C211A11A     | DIGITAL PROCESS METER                | E+H                |
| RECORDER                                                                                               | 1   | RSG35-1C84+C1       | DIGITAL CHART RECORDER               | E+H                |
| ANTENNA                                                                                                | 1   | T09060010006HM      | CELLULAR ANTENNA                     | VENTEV             |
| ETH1403                                                                                                | 1   | EDS-205             | UNMANAGED ETHERNET SWITCH, 5 PORT    | MOXA               |
| FU1403, FU1407                                                                                         | 2   | M15HF25V2/100       | MINIATURE FUSE, FAST ACTING, 2A      | MERSEN             |
| FU1501, FU1520, FU1601                                                                                 | 3   | M15HF25V0.5/100     | MINIATURE FUSE, FAST ACTING, 0.5A    | MERSEN             |
| FU1758, FU1759, FU1760, FU1761, FU1762, FU1763, FU1764, FU1765                                         | 8   | GGM3                | FAST BLOW FUSE, 3A                   | MERSEN             |
| FU1403, FU1407, FU1501, FU1520, FU1601, FU1758, FU1759, FU1760, FU1761, FU1762, FU1763, FU1764, FU1765 | 13  | 3046100             | FUSE TERMINAL BLOCK, 120VAC          | PHOENIX CONTACT    |
| LS1205                                                                                                 | 1   | ALFSWD              | REMOTE DOOR SWITCH                   | HOFFMAN            |
| PWS1301                                                                                                | 1   | BMXCPS3500H         | POWER SUPPLY MODULE                  | MODICON            |
| OIT                                                                                                    | 1   | HMDT752             | OPERATOR INTERFACE TERMINAL          | SCHNEIDER ELECTRIC |
| OIT                                                                                                    | 1   | HMI2U               | DISPLAY BASE UNIT                    | SCHNEIDER ELECTRIC |
| CONTROLLER                                                                                             | 1   | BMXP342020H         | PROCESSOR                            | MODICON            |
| BACKPLANE                                                                                              | 1   | BMXXBP1200H         | BACKPLANE, 12 SLOTS                  | MODICON            |
| PLC1502, PLC1521, PLC1602, PLC1901, PLC1701                                                            | 5   | BMXFTB2000          | TERMINAL BLOCK, 20 PIN               | MODICON            |
| PLC1802                                                                                                | 1   | BMXFTB2800          | TERMINAL BLOCK, 28 PIN               | MODICON            |
| PLC1502, PLC1521, PLC1602                                                                              | 2   | BMXDAI1604H         | DISCRETE INPUT MODULE                | MODICON            |
| PLC1701                                                                                                | 1   | BMXDRA0815H         | DISCRETE OUTPUT MODULE               | MODICON            |
| PLC1802                                                                                                | 1   | BMXAMI0810H         | ANALOG INPUT MODULE                  | MODICON            |
| PLC1901                                                                                                | 1   | BMXAM00410H         | ANALOG OUTPUT MODULE                 | MODICON            |
| ISB1432                                                                                                | 1   | 2865366             | IS BARRIER / SPLITTER                | PHOENIX CONTACT    |
| SP1402                                                                                                 | 1   | IS-50NX-C2          | COAXIAL RF SURGE PROTECTOR           | POLYPHASER         |
| CBL1402                                                                                                | 1   | LMR195NMSM-6        | SMA JUMPER CABLE                     | VENTEV             |
| CBL1402A                                                                                               | 1   | LDF4-50A            | COAXIAL CABLE                        | AMPHENOL           |
| THERMOSTAT                                                                                             | 1   | 7T.81.0.000.2403    | ENCLOSURE HEATER THERMOSTAT, NC      | FINDER             |
| HTR1207                                                                                                | 1   | SCE-TSH75           | ENCLOSURE HEATER                     | SCE                |
| TB-AC, TB-AI, TB-AO, TB-DC, TB-DI, TB-DO                                                               | 163 | 3044076             | UNIVERSAL TERMINAL BLOCK - UT 2,5    | PHOENIX CONTACT    |
| TB-AC, TB-AI, TB-AO, TB-DC, TB-DI, TB-DO                                                               | A/R | 3047028             | TERMINAL END BARRIER                 | PHOENIX CONTACT    |
| TB-AC, TB-AI, TB-AO, TB-DC, TB-DI, TB-DO                                                               | A/R | 3044092             | GROUNDING TERMINAL BLOCK             | PHOENIX CONTACT    |
| TB-AC, TB-AI, TB-AO, TB-DC, TB-DI, TB-DO                                                               | A/R | 0800886             | TERMINAL ANCHOR                      | PHOENIX CONTACT    |

| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS<br>PLC/RTU CONTROL PANEL INT. LAYOUT |                 |                |
|------------|-----------|------|----|-------------------------------------------------------------------------|-----------------|----------------|
|            | NO.       | DATE | BY |                                                                         |                 |                |
| DECIMAL    | 1         |      |    |                                                                         |                 |                |
|            | 2         |      |    |                                                                         |                 |                |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                                                            | SCALE NONE      | MATERIAL       |
|            | 4         |      |    | CHK'D MN                                                                | DATE 03-12-2026 | DRAWING NUMBER |
| ANGULAR    | 5         |      |    | TRACED                                                                  | APP'D           | 32384-11       |
|            | 6         |      |    |                                                                         |                 |                |

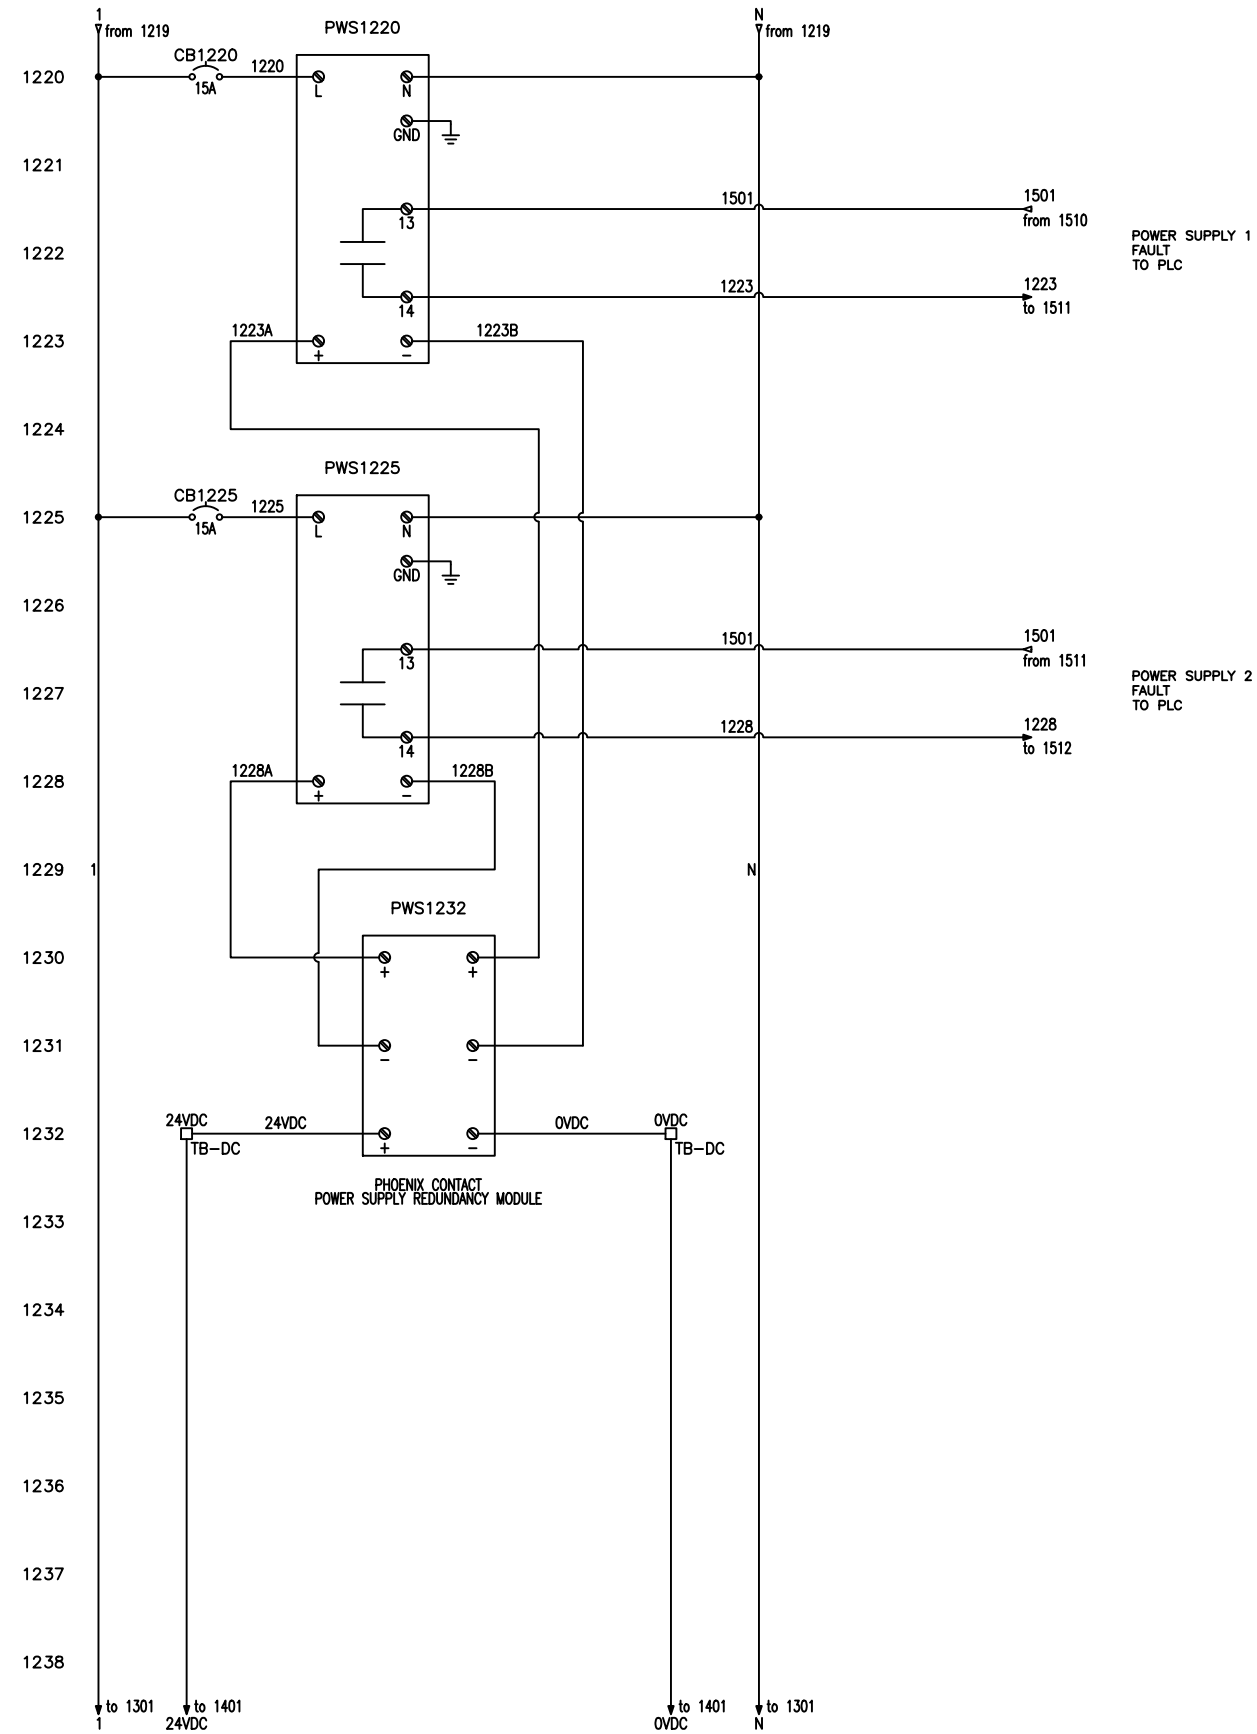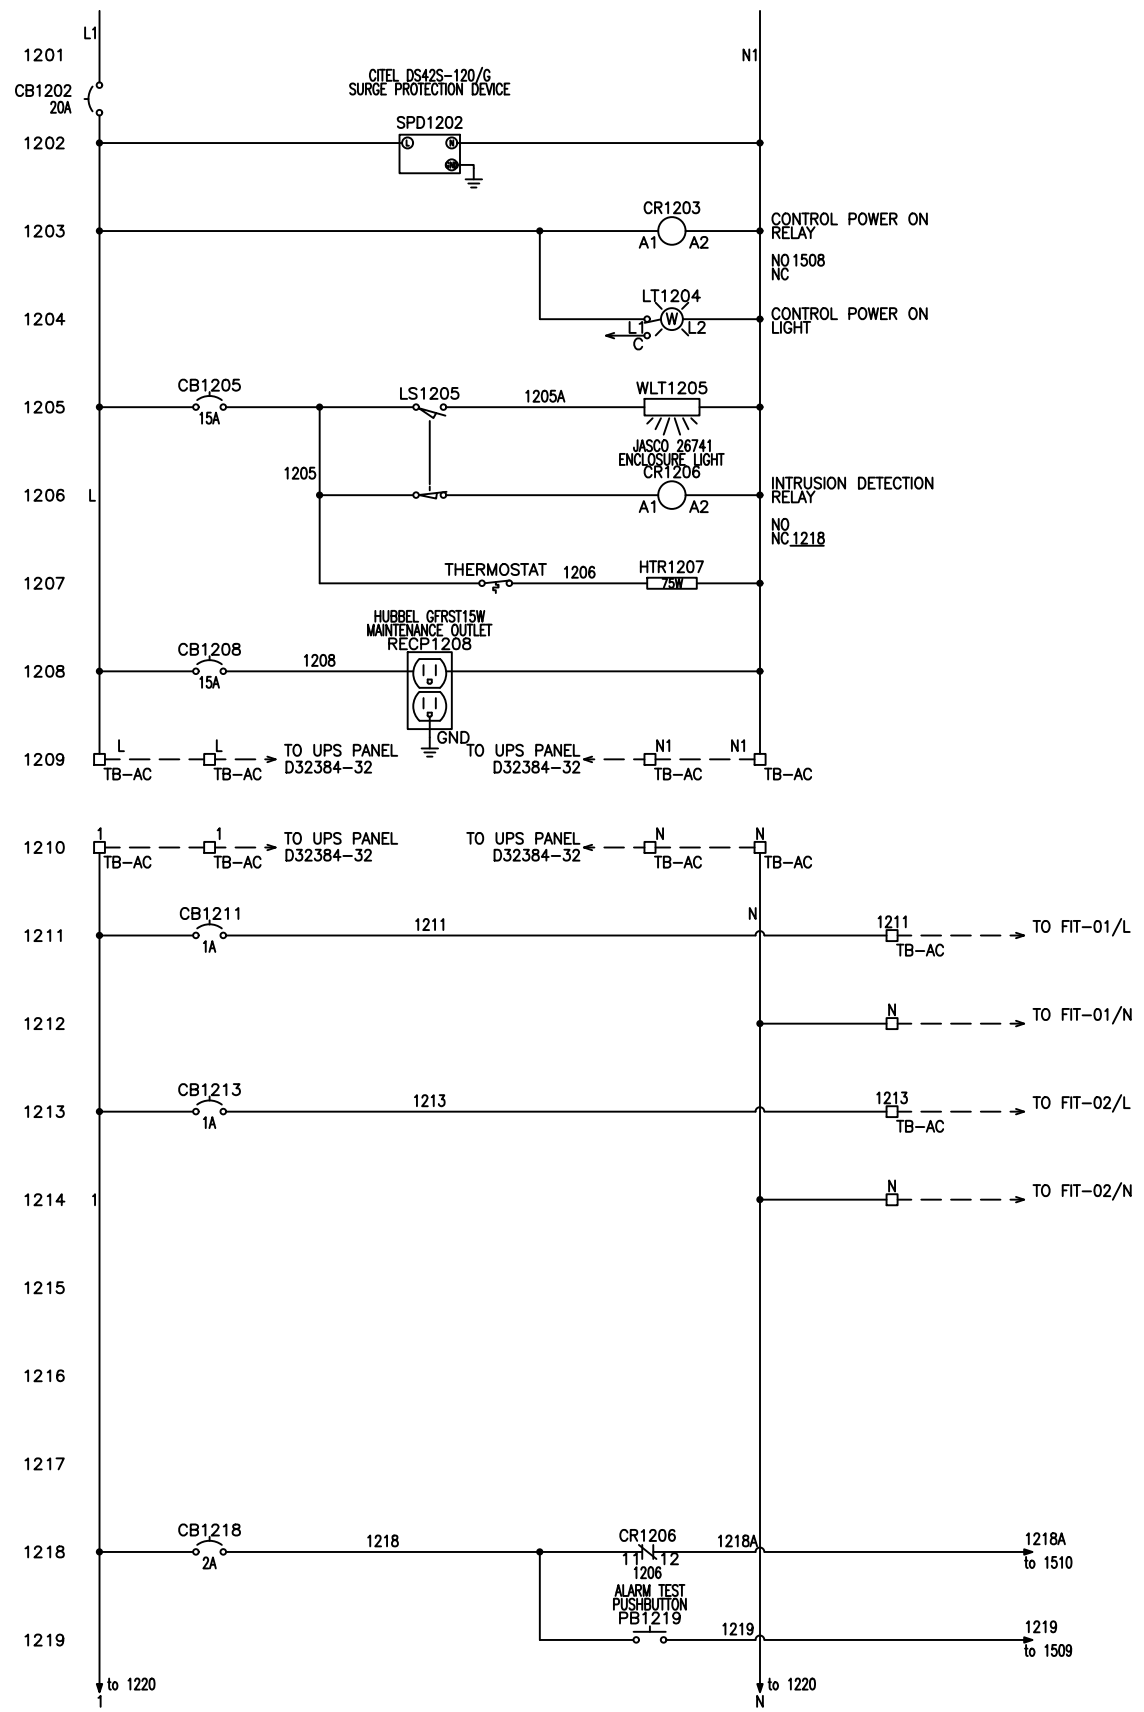



| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS |  |  |
|------------|-----------|------|----|------------------------------------|--|--|
|            | NO.       | DATE | BY | 120VAC WIRING DIAGRAM              |  |  |
| DECIMAL    | 1         |      |    |                                    |  |  |
|            | 2         |      |    |                                    |  |  |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                       |  |  |
|            | 4         |      |    | SCALE NONE                         |  |  |
| ANGULAR    | 5         |      |    | DATE 03-12-2026                    |  |  |
|            | 6         |      |    | DRAWING NUMBER                     |  |  |

|          |
|----------|
| 32384-12 |
|----------|

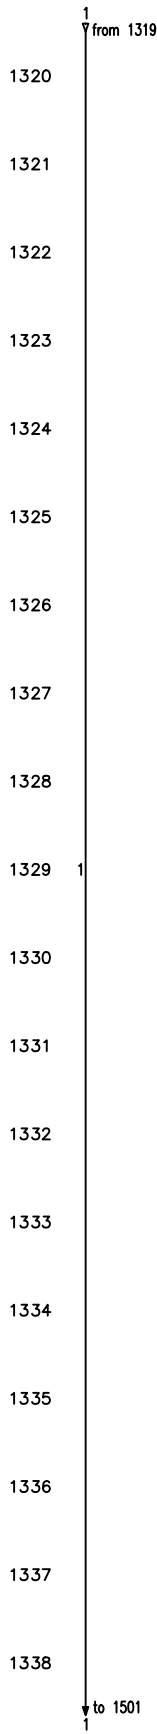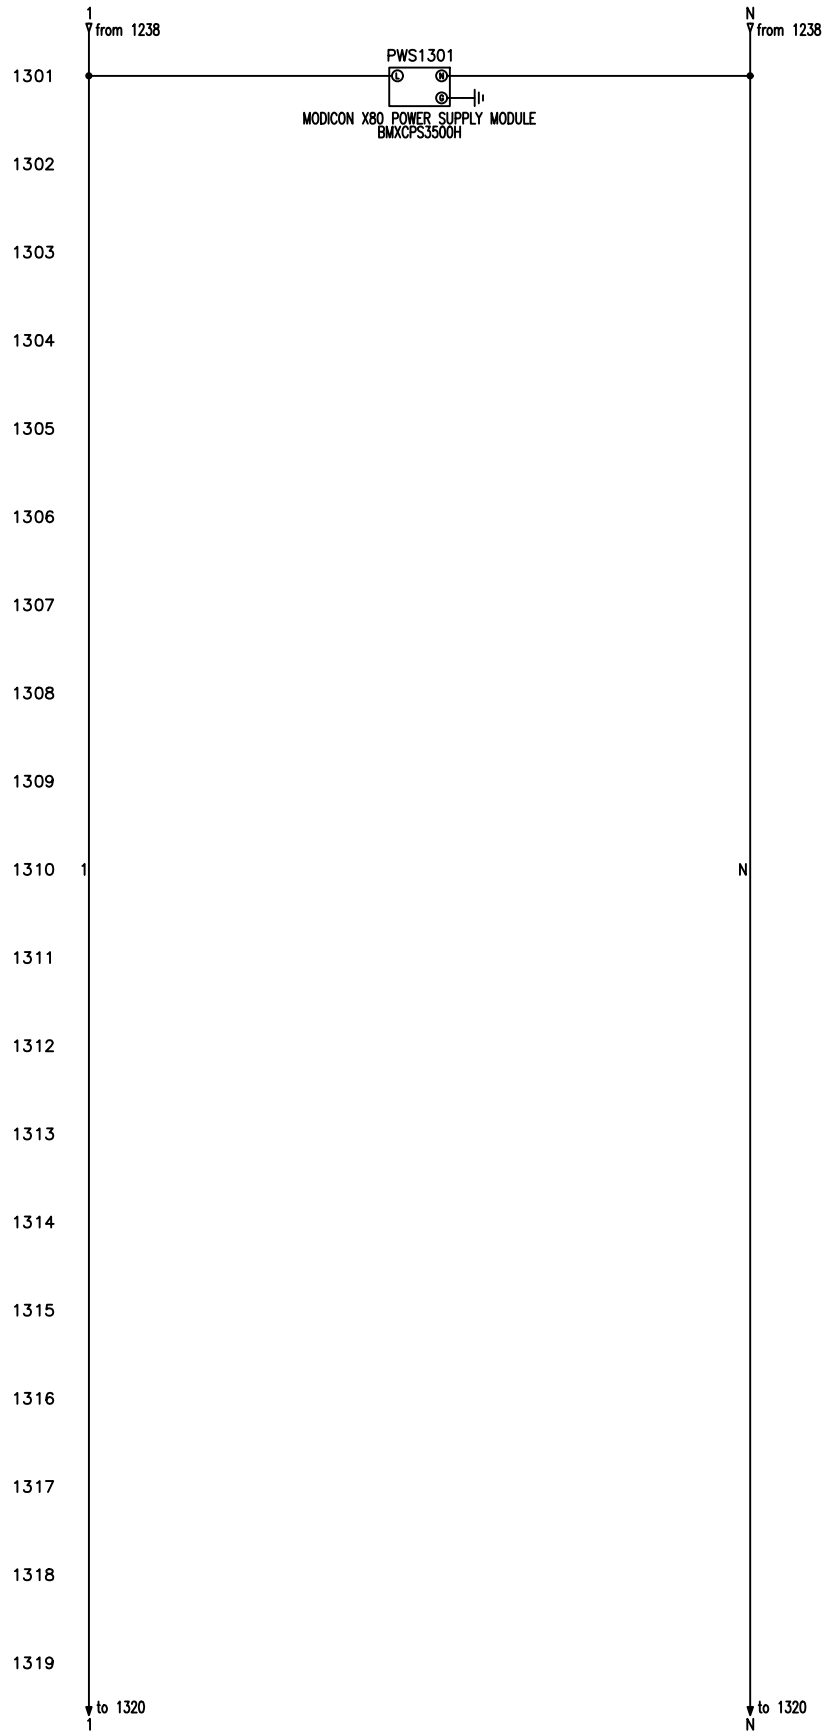

| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS<br>120VAC WIRING DIAGRAM |                 |                |
|------------|-----------|------|----|-------------------------------------------------------------|-----------------|----------------|
|            | NO.       | DATE | BY |                                                             |                 |                |
| DECIMAL    | 1         |      |    |                                                             |                 |                |
|            | 2         |      |    |                                                             |                 |                |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                                                | SCALE NONE      | MATERIAL       |
|            | 4         |      |    | CHK'D MN                                                    | DATE 03-12-2026 | DRAWING NUMBER |
| ANGULAR    | 5         |      |    | TRACED                                                      | APP'D           | 32384-13       |
|            | 6         |      |    |                                                             |                 |                |



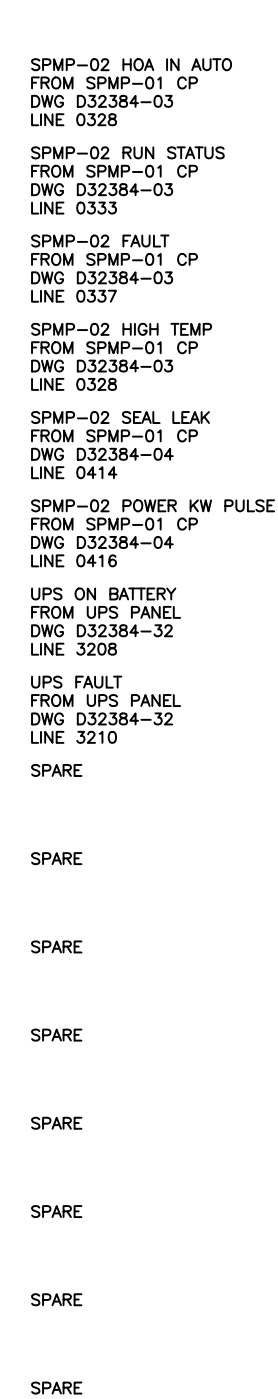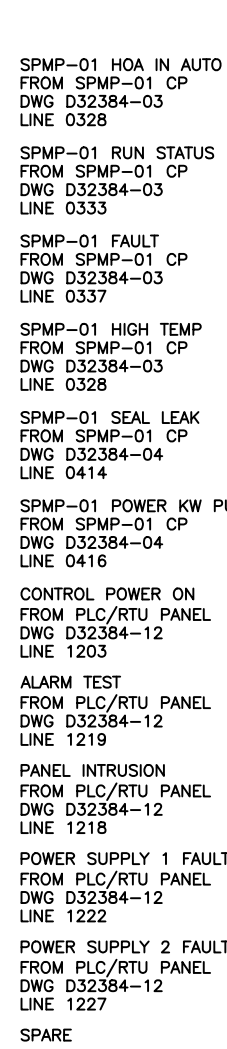


| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS                                                    |                                                                    |  |
|------------|-----------|------|----|---------------------------------------------------------------------------------------|--------------------------------------------------------------------|--|
|            | NO.       | DATE | BY | DIGITAL INPUT WIRING DIAGRAM                                                          |                                                                    |  |
| DECIMAL    | 1         |      |    |  |                                                                    |  |
|            | 2         |      |    |                                                                                       |                                                                    |  |
| FRACTIONAL | 3         |      |    | <div><div>DRAWN BY ZBB</div><div>SCALE NONE</div><div>MATERIAL</div></div>            |                                                                    |  |
|            | 4         |      |    |                                                                                       |                                                                    |  |
| ANGULAR    | 5         |      |    | <div><div>DATE 03-12-2026</div><div>DRAWING NUMBER</div></div>                        |                                                                    |  |
|            | 6         |      |    |                                                                                       |                                                                    |  |
|            |           | 7    |    |                                                                                       | <div><div>TRACED MN</div><div>APP'D</div><div>32384-15</div></div> |  |







| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS                                                    |            |
|------------|-----------|------|----|---------------------------------------------------------------------------------------|------------|
|            | NO.       | DATE | BY | DIGITAL INPUT WIRING DIAGRAM                                                          |            |
| DECIMAL    | 1         |      |    |  |            |
|            | 2         |      |    |                                                                                       |            |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                                                                          |            |
|            | 4         |      |    | SCALE                                                                                 | NONE       |
| ANGULAR    | 5         |      |    | CHK'D                                                                                 | MN         |
|            | 6         |      |    | DATE                                                                                  | 03-12-2026 |
|            |           |      |    | TRACED                                                                                | APP'D      |
|            |           |      |    | DRAWING NUMBER                                                                        |            |
|            |           |      |    | 32384-16                                                                              |            |

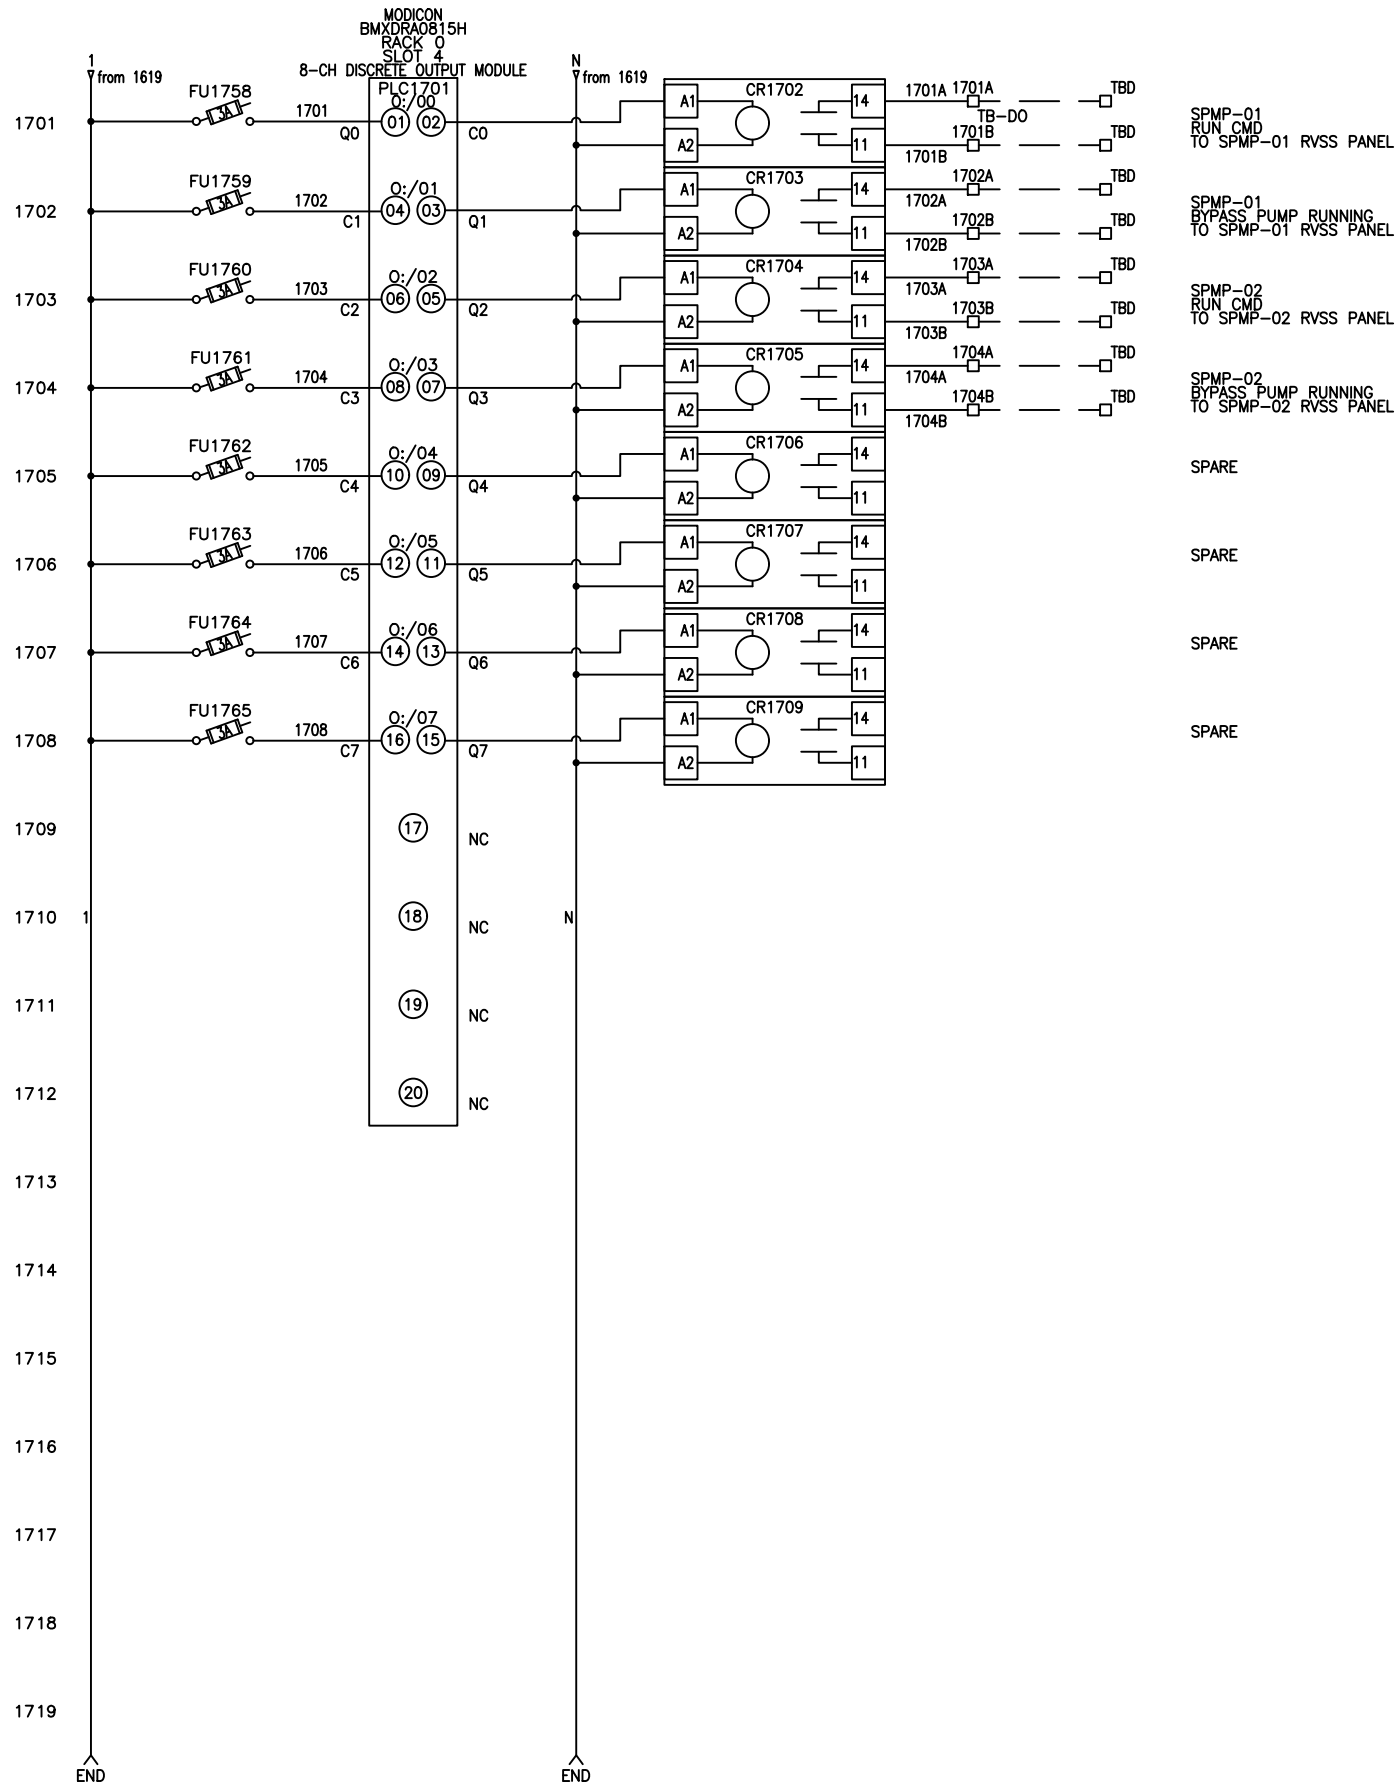

| TOLERANCES | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS                                                    |                 |                |
|------------|-----------|------|----|---------------------------------------------------------------------------------------|-----------------|----------------|
|            | NO.       | DATE | BY | DIGITAL OUTPUT WIRING DIAGRAM                                                         |                 |                |
| DECIMAL    | 1         |      |    |  |                 |                |
|            | 2         |      |    |                                                                                       |                 |                |
| FRACTIONAL | 3         |      |    | DRAWN BY ZBB                                                                          | SCALE NONE      | MATERIAL       |
|            | 4         |      |    | CHK'D MN                                                                              | DATE 03-12-2026 | DRAWING NUMBER |
| ANGULAR    | 5         |      |    | TRACED                                                                                | APP'D           | 32384-17       |
|            | 6         |      |    |                                                                                       |                 |                |



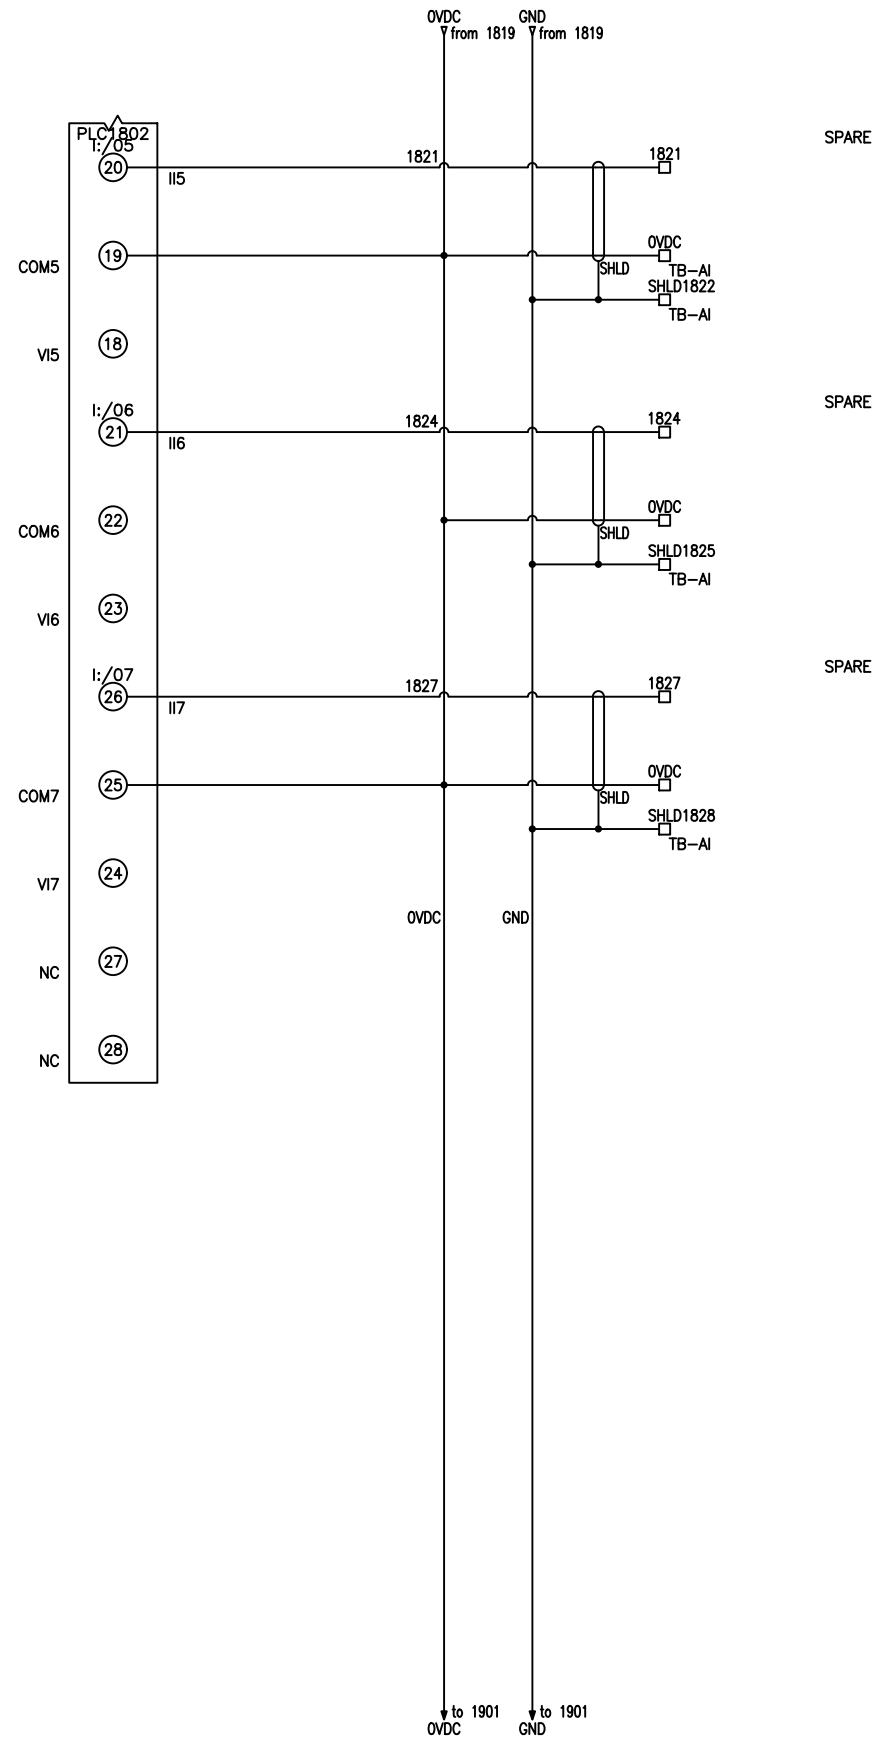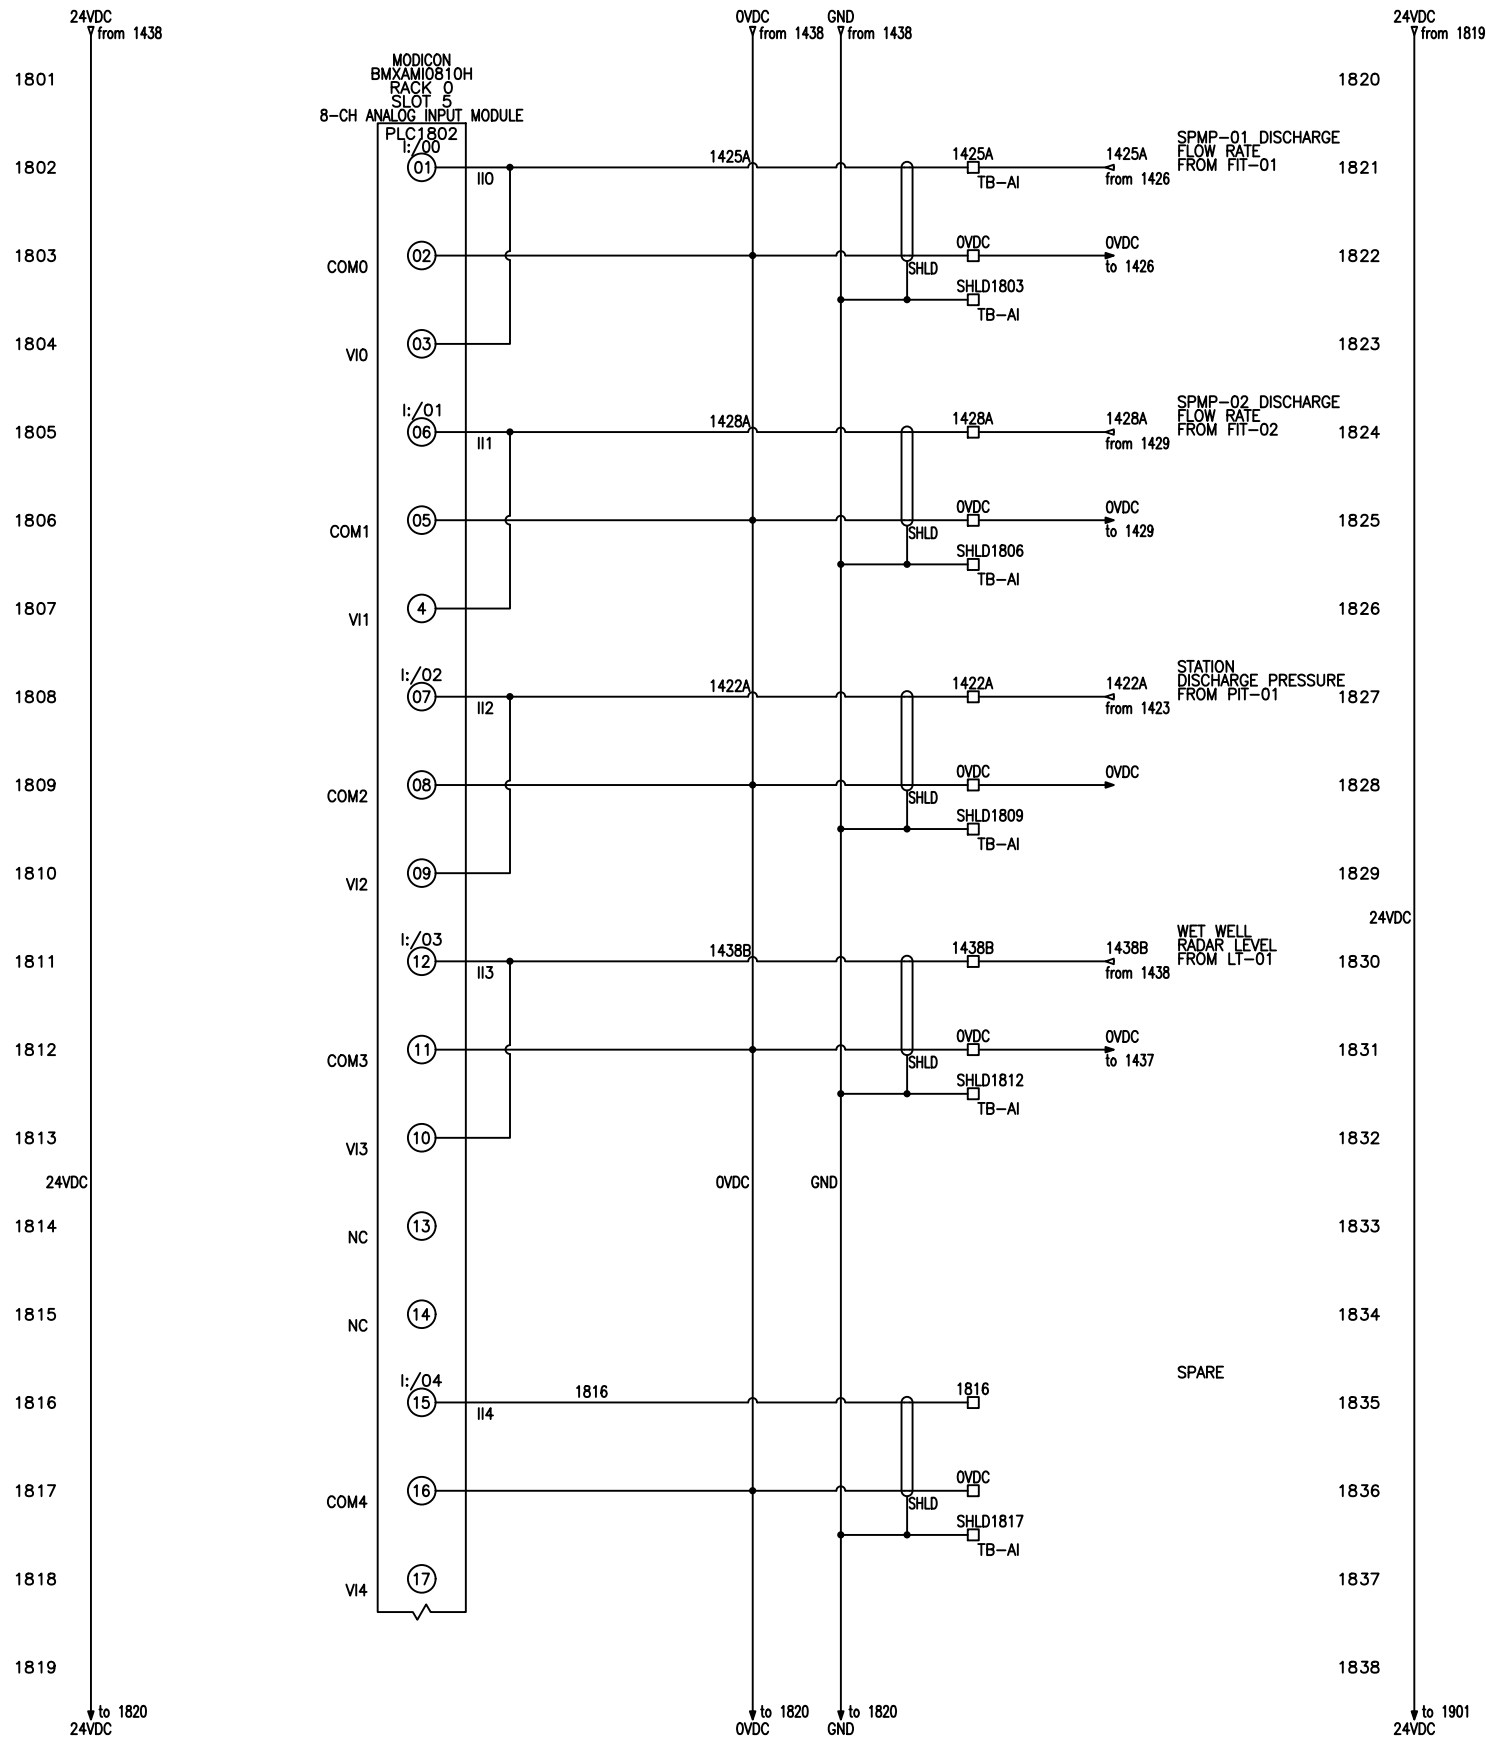

| TOLERANCES |   | REVISIONS |      |    | POMONKEY PUMP STATION IMPROVEMENTS<br>ANALOG INPUT WIRING DIAGRAM |                 |                |
|------------|---|-----------|------|----|-------------------------------------------------------------------|-----------------|----------------|
|            |   | NO.       | DATE | BY |                                                                   |                 |                |
| DECIMAL    | 1 |           |      |    |                                                                   |                 |                |
|            | 2 |           |      |    |                                                                   |                 |                |
| FRACTIONAL | 3 |           |      |    | DRAWN BY ZBB                                                      | SCALE NONE      | MATERIAL       |
|            | 4 |           |      |    | CHK'D MN                                                          | DATE 03-12-2026 | DRAWING NUMBER |
| ANGULAR    | 5 |           |      |    | TRACED                                                            | APP'D           | 32384-18       |
|            | 6 |           |      |    |                                                                   |                 |                |

